


TRACELINE RECESSED / YORI MODULES


www.reggiani.net

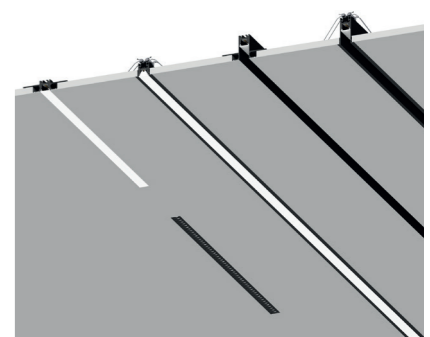


Installation Guide
ITA ENG DEU FRA ESP RUS

Reggiani


01 - THICKNESS CEILING DIMENSIONS

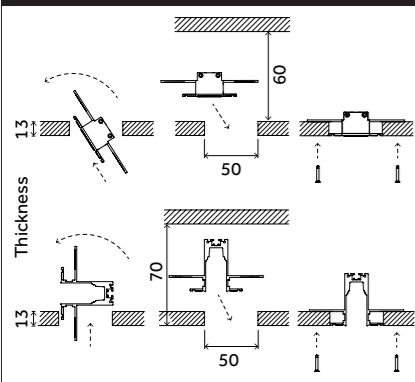


02 - RECESSED TRIMLESS - STAND ALONE

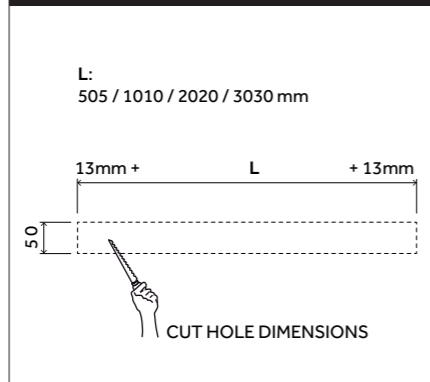


03

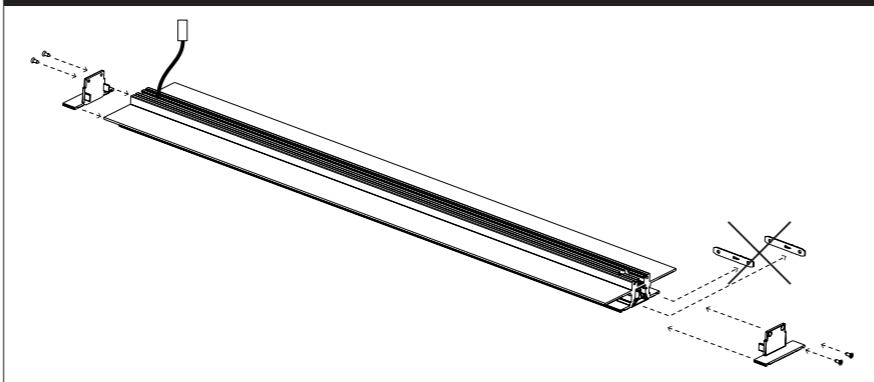


04

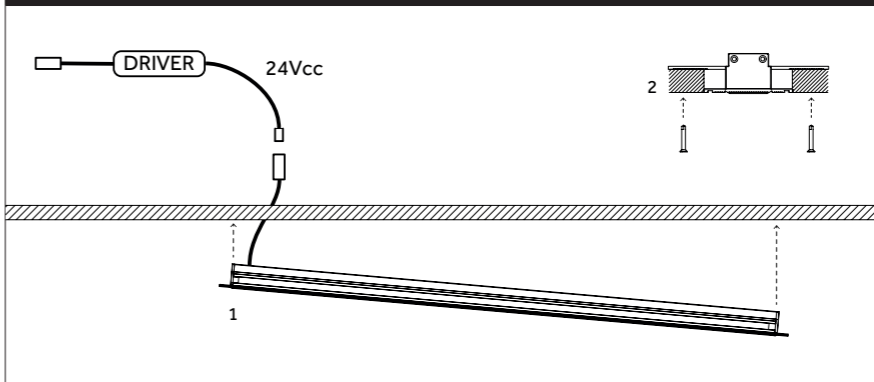


01 - RECESSED TRIMLESS - CONTINUOUS INSTALLATION

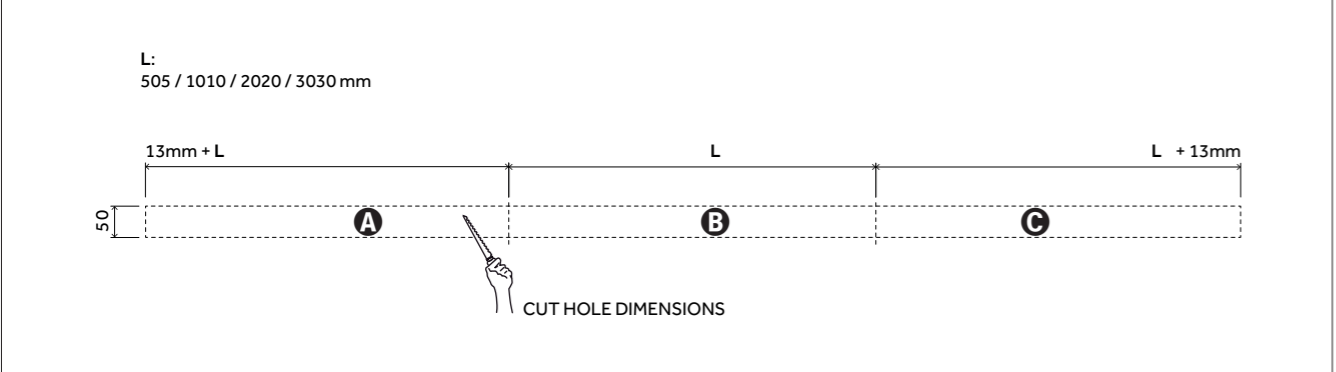


02

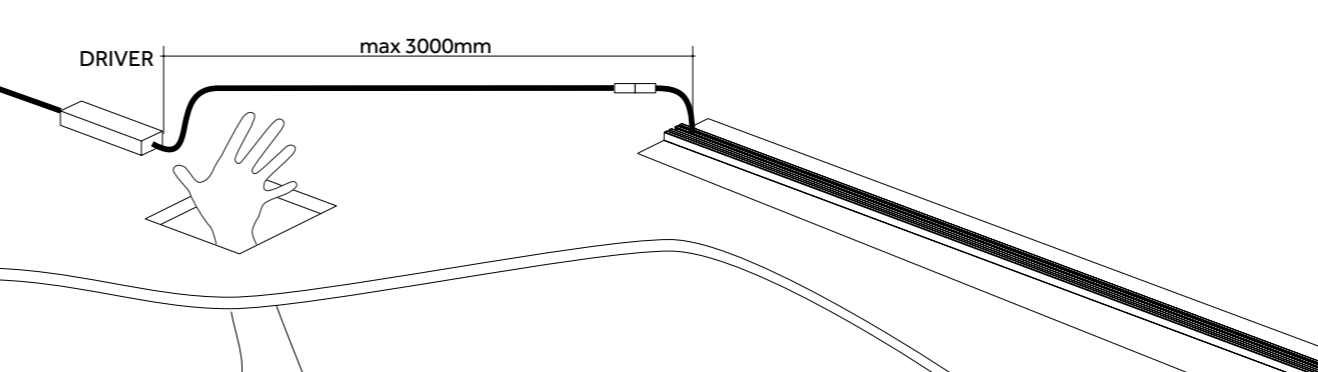


03

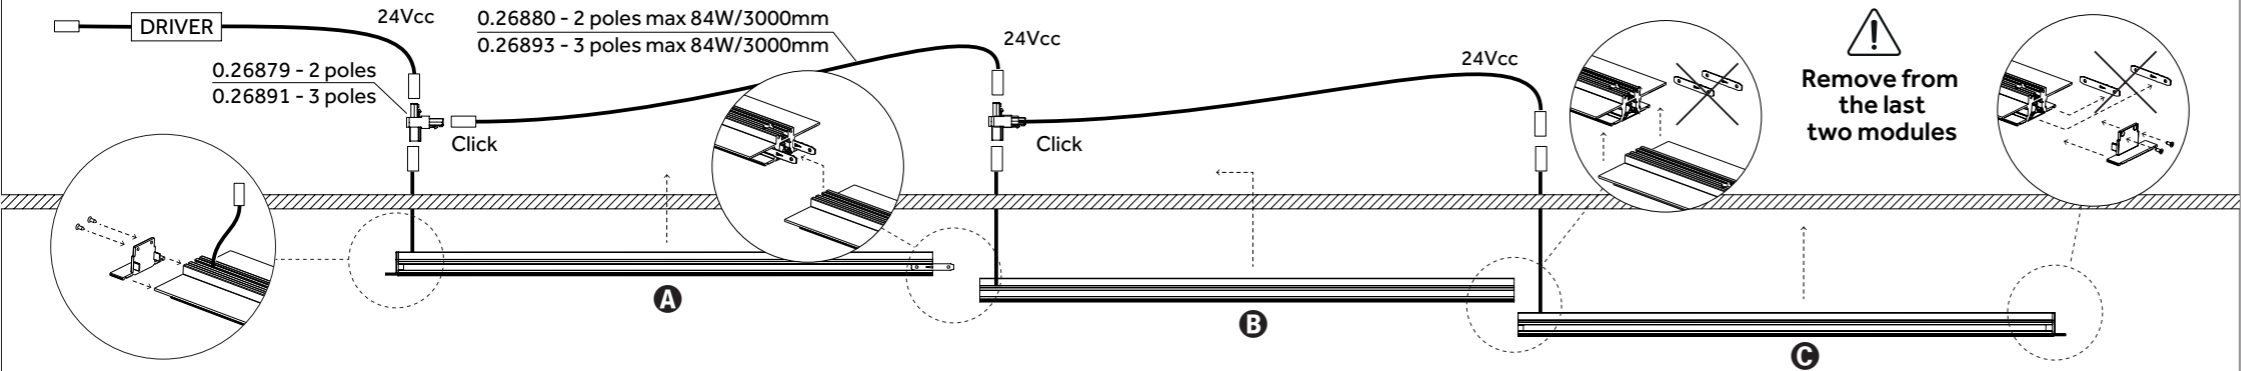


04

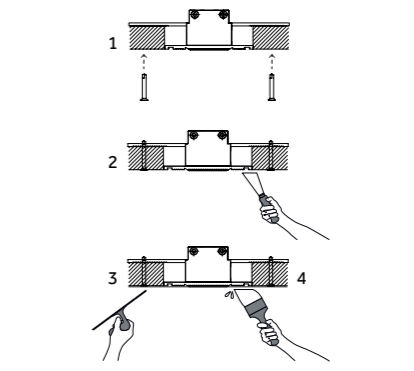


01 - THICKNESS CEILING DIMENSIONS

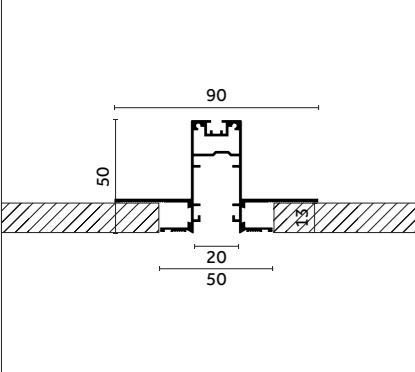


02 - RECESSED TRIMLESS - YORI MODULES INSTALLATION

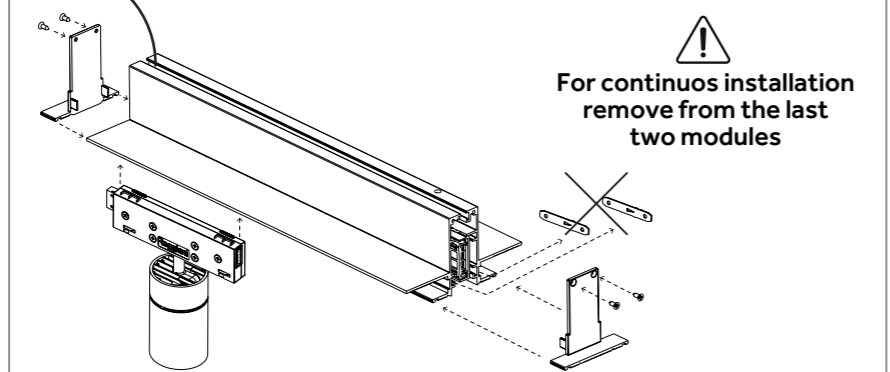


03 - MOUNTING PROJECTOR

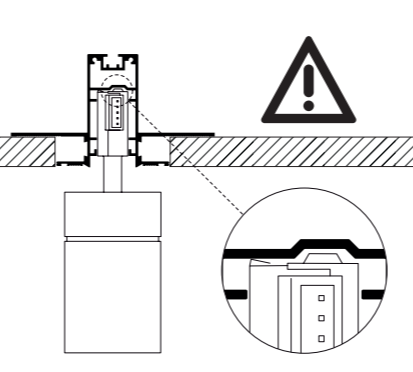


04

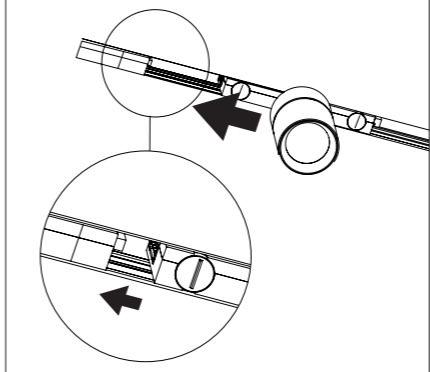


05

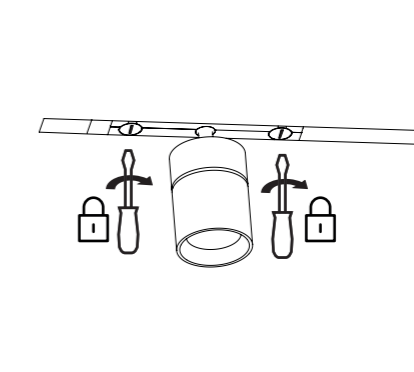


01

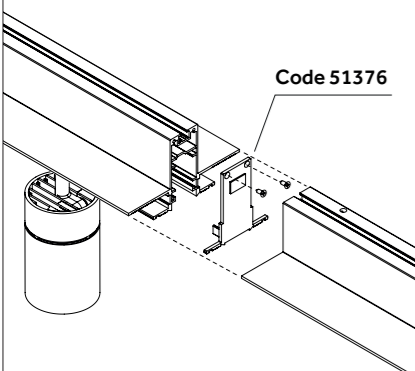

02

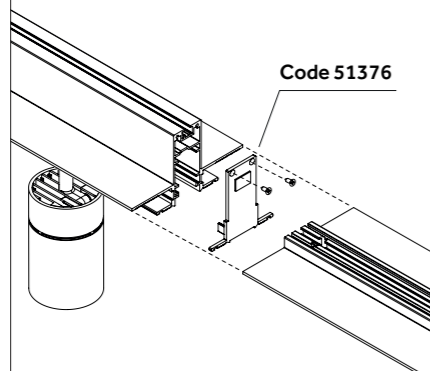


03 - MOUNTING CLUSTER WITH CONTINUOUS LINE

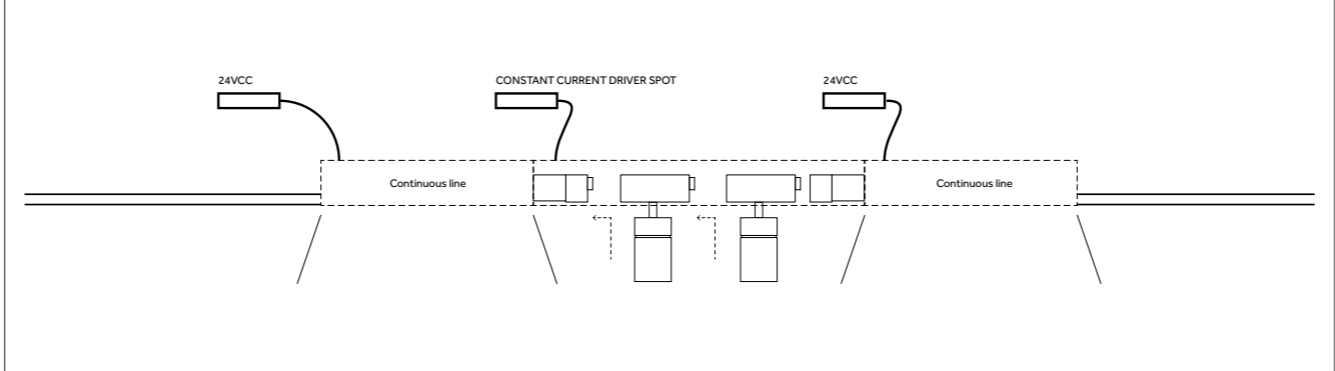


DRIVERS CODE

0/V/D.30838	250 mA
0/V/D.30839	350 mA
0/V/D.30840	500 mA
0/V/D.30841	700 mA
0/V/D.30842	800 mA
0/V/D.30843	900 mA
30844	350 mA LV
30845	700 mA LV
30846	900 mA LV


01 - THICKNESS CEILING DIMENSIONS

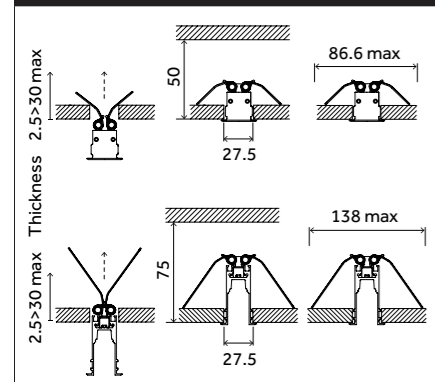


02 - TRACELINE RECESSED TRIM STAND ALONE

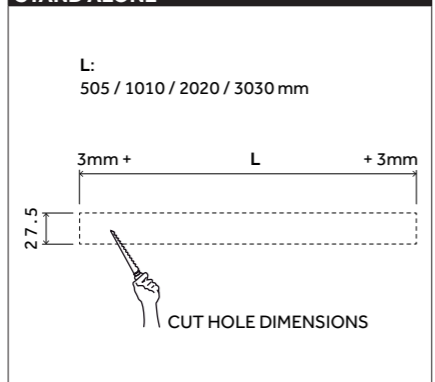


03

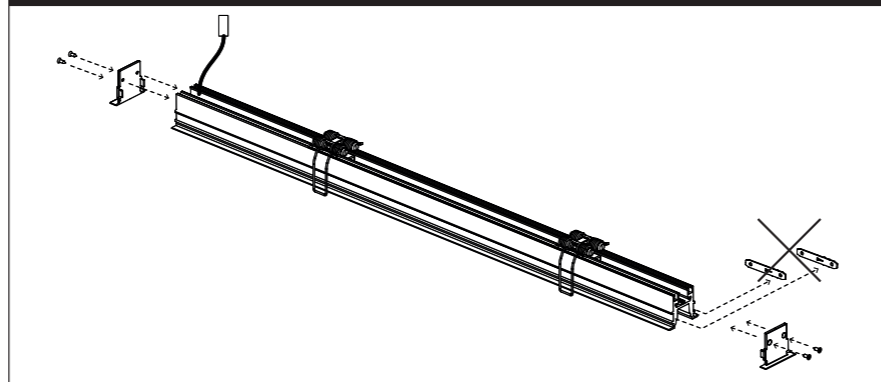


04

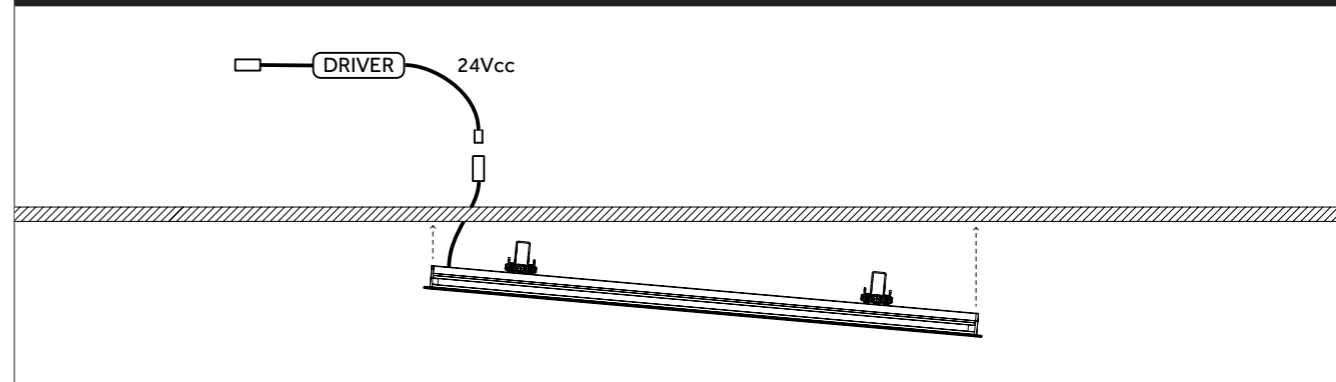


01 - TRACELINE RECESSED TRIM - CONTINUOUS INSTALLATION

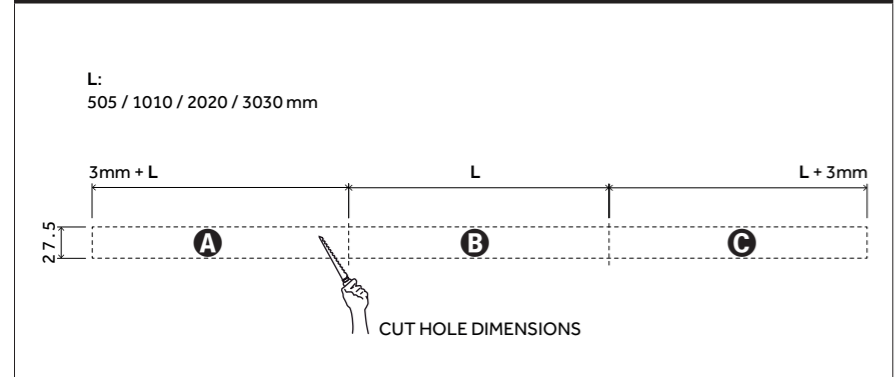


02

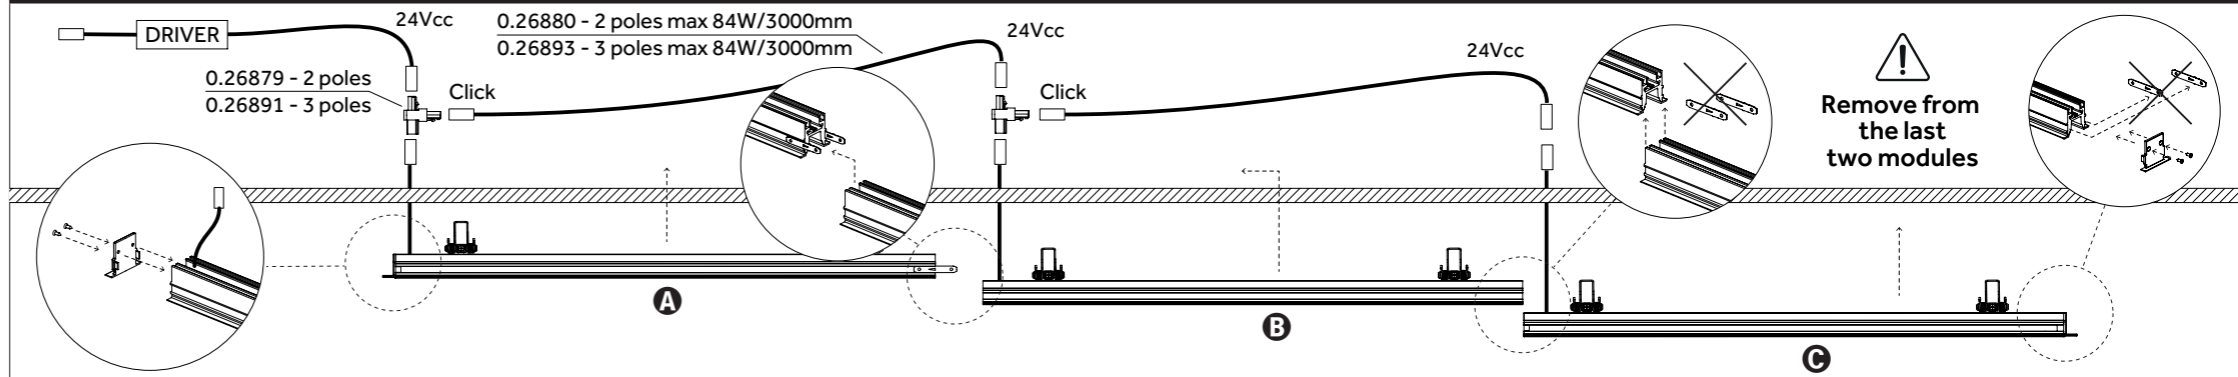


01 - THICKNESS CEILING DIMENSIONS

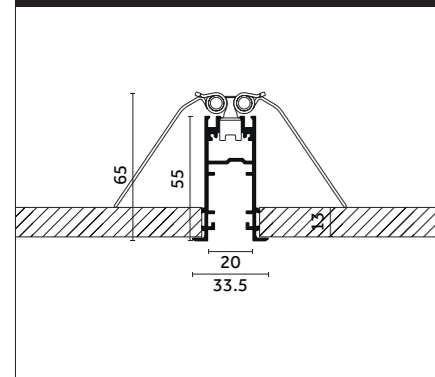


02 - TRACELINE RECESSED TRIM YORI MODULES SINGLE INSTALLATION

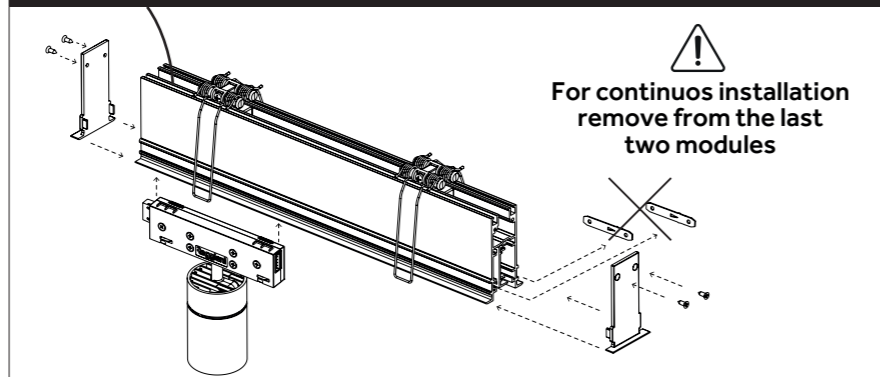


03

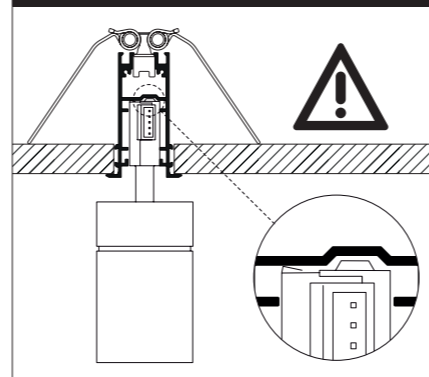


04 - MOUNTING PROJECTOR

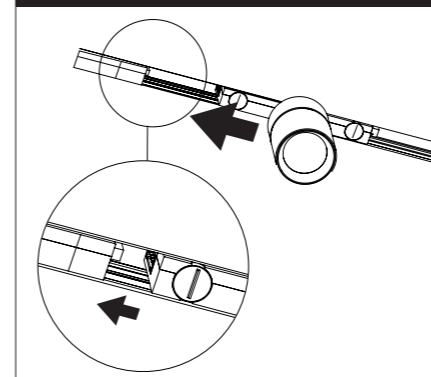


05

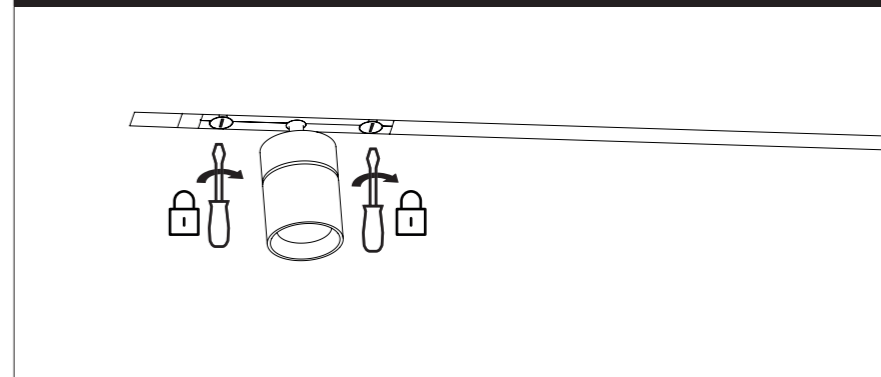


01

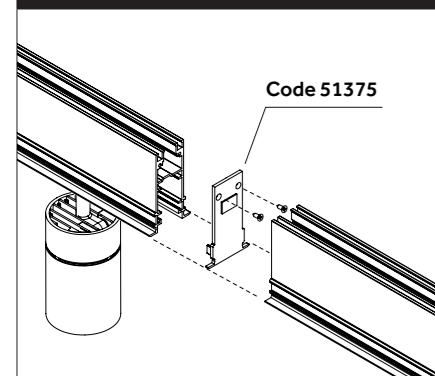

02

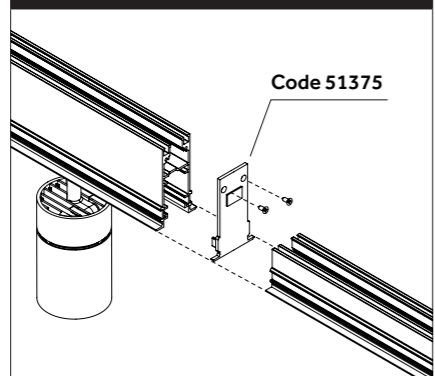

03 - MOUNTING CLUSTER WITH CONTINUOUS LINE

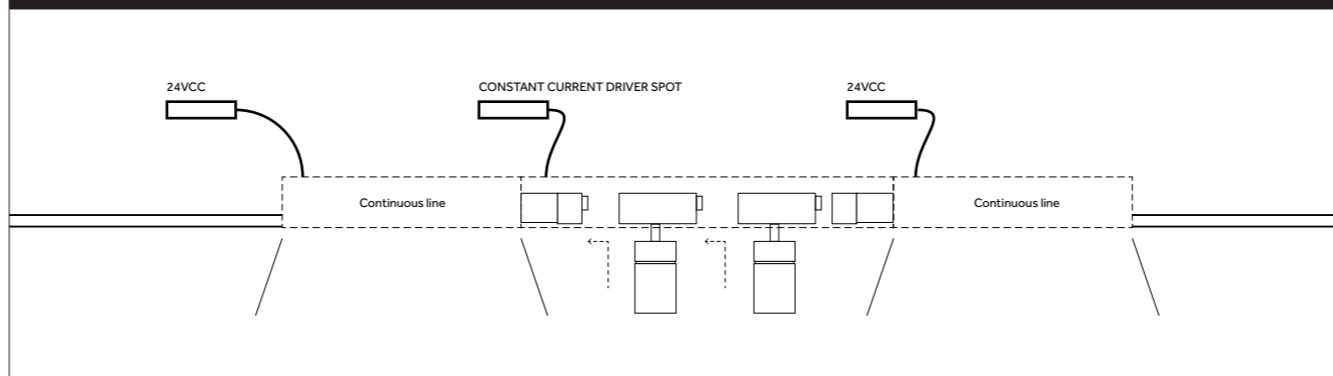

DRIVERS CODE

0/V/D.30838	250 mA
0/V/D.30839	350 mA
0/V/D.30840	500 mA
0/V/D.30841	700 mA
0/V/D.30842	800 mA
0/V/D.30843	900 mA
30844	350 mA LV
30845	700 mA LV
30846	900 mA LV